 



To move Forward or backward on the CD by small amounts :

- Use the FAST FORWARD key, located to the right of the PLAY/PSTOP key, or
- Use the REWIND key, located to the left of the PLAY/STOP key.
- Hold these keys down until you reach the desired spot.

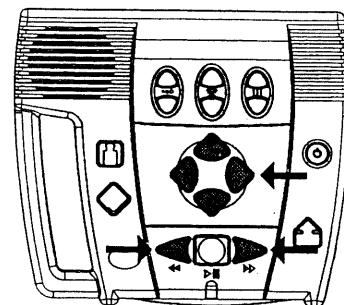

For DAISY books, you can also Skip forward or backward in larger amounts:

 - Use the up and down arrow keys to select the amount to skip such as phrase, page or level. Level 1 is usually a chapter and lower levels are smaller sections. The choices are set by the book producer.
- Use the left and right arrows to skip backward or forward by the selected amount.

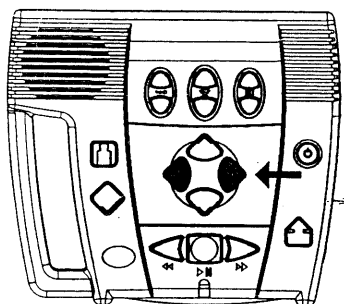**Information - I Key (top, left key)**

This key will give the following information about the book:

- Number of pages and total play time of the book.
- Number of the current page in the book.
- The time elapsed from the beginning of the book to your current position and time remaining.
- Number of books on current CD.



To use this feature, press the "I" key once. Press the LEFT or RIGHT ARROW keys to move from one item to another.

BATTERY INFORMATION

- Type of Battery: 4 internal rechargeable batteries are included in the unit.
- Battery Charge Time: 11 hours
- Battery Charge Life: 5 hours of continuous play for Daisy books

Turning the Victor Classic On and Off

- On: Press and hold the round grey POWER button, located to the right of the right arrow, until you hear one beep.
- Off: Press and hold the POWER button until you hear two beeps.

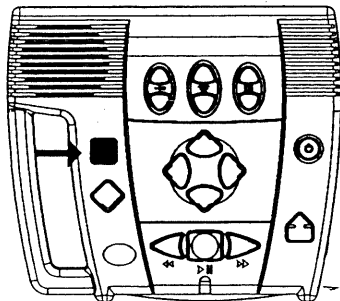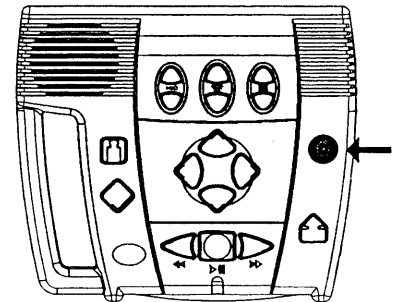


Key Describer

This feature will allow you to hear the functions of the various keys.

The Key Describer function is automatically enabled when there is no CD in the player. You may press any key to hear what it does.

Once a CD is inserted, you can turn the Key Describer function on and off if you press and hold the book INFO button which is the upper of the two buttons on the left side.

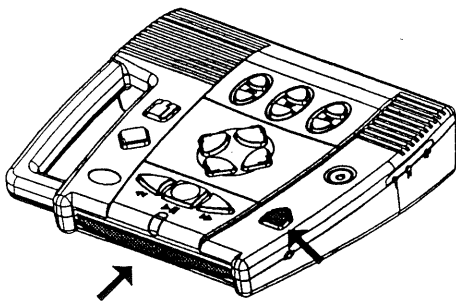

To Insert a CD



1. Insert the CD, label side up, into the CD ROM slot drive located on the front side of the unit.
2. Gently push the CD forward. A motorized mechanism will automatically pull the CD into the player.
3. After a few seconds, Victor Classic will read the title of the book and, after a beep, will automatically begin reading the disc where you left off.

To Eject a CD

Press the yellow EJECT button, located below the power button. The CD will slide out.

To Play or Stop a CD


Press the PLAY/STOP key to start and stop playing a book.

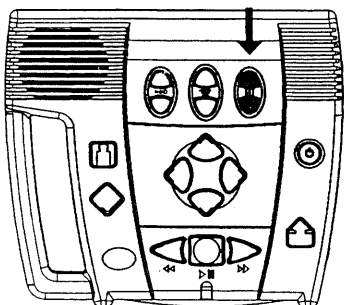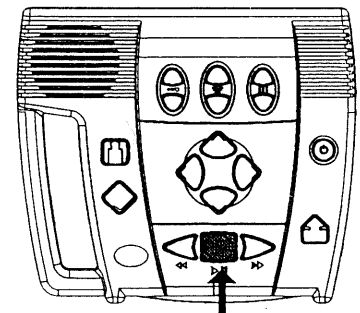

To Adjust the Speed

The Speed Keys are the right most set of vertical keys above the four arrow keys: Press the bottom SPEED key to decrease the speed.

- Press the top SPEED key to increase the speed.
- Press either SPEED key until you hear a beep to reset at default speed.

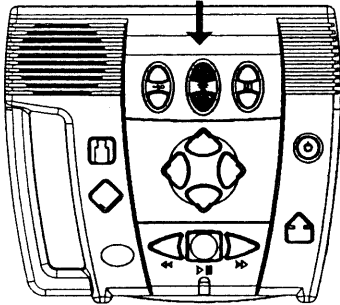

To Adjust the Volume


The Volume Keys are the middle, yellow set of vertical keys above the four arrow keys:

- Press the bottom VOLUME key to decrease the volume
- Press the top VOLUME key to increase the volume

To Adjust the Tone


The Tone Keys are the left most set of vertical keys above the four arrow keys

- Press the bottom TONE key to decrease the tone.
- Press the top TONE key to increase the tone.
- Press either TONE key until you hear a beep to reset at the default tone.

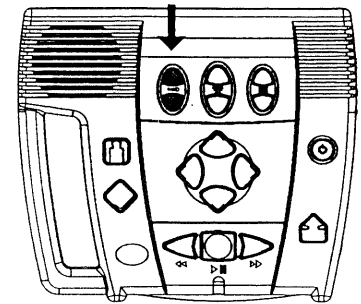

NOTES: If you accidentally insert a CD upside down, it will eject without damage.

Do not force a CD into the CD ROM slot drive. If the motorized mechanism does not automatically pull the CD into the player, check to make sure you have ejected the previous CD

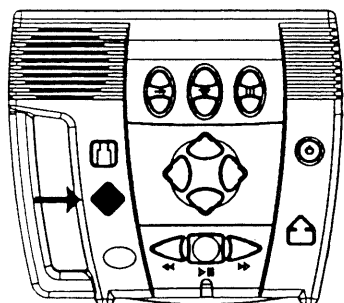


Placing a Bookmark

- Position to the place in the book where you would like to insert a bookmark.
- Press and hold the BOOKMARK key until you hear the message saying that the bookmark has been inserted.


Jumping Forward or Backward to Bookmarks

1. Press and release the BOOKMARK key for the option "Bookmark List".
2. Press the LEFT or RIGHT ARROW key to move to the previous or next bookmark. Continue pressing the LEFT or RIGHT ARROW key until the correct bookmark is found. The reading automatically begins.

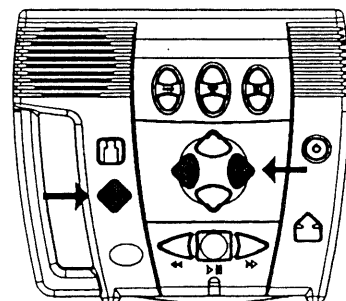

Deleting All Bookmarks

1. Press the BOOKMARK key two times for the option "Remove All Bookmarks".
2. Press PLAY/STOP key to confirm.
3. Press any key to cancel.

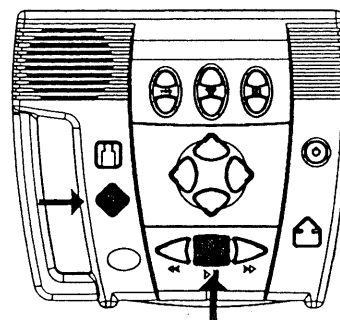

TIP: to go to the beginning of the book, press and release the BOOKMARK key, then press the LEFT ARROW key.

What should I do if I turn the VICTOR Classic on and press PLAY but nothing happens?

- Check that the power cord is securely plugged into the wall and into the machine.
- If using the machine with batteries only, you may need to recharge the batteries.
- Make sure the volume is turned up.
- Make sure the CD is label-side up and inserted correctly into the CD-ROM drive.
- Make sure the CD is loaded before pressing PLAY. When the CD is loaded correctly, you will hear the title being read.

What should I do if a CD is stuck in the machine and it won't play or eject?

1. Turn off your VICTOR Classic
2. Press and hold the EJECT key
3. While continuing to hold the EJECT key, turn on the VICTOR Classic.
4. Release the EJECT key after the Welcome Message.

What should I do if the victor Classic does not respond to any keys even the power button?

1. Ensure the unit is plugged into a power outlet.
2. Press & hold the POWER button 10 seconds to reset the unit. This will also cause it to power off.
3. Press the power button again to turn the Victor Classic on. It should nnow start normally.

If any other problems occur, please contact our sales support team at 1-888-723-7273, or contact tech.support@visuaide.com.